

(Tile positioning cross)

(Application) :

(Adjust the size of the gap between the tiles, so that tile affixed neat and beautiful, ceramic tile gap between the same, uniform)

(Solid)



(Size)

- 1.0 mm
- 1.5 mm
- 2.0 mm
- 2.5 mm
- 3.0 mm
- 4.0 mm
- 5.0 mm
- 10 mm (T形)



(Tile positioning cross)

(Size)

4.0 mm
5.0 mm
6.0 mm
7.0 mm
8.0 mm
9.0 mm
10.0 mm

(Hollow)



(Tile positioning cross)

(Adjust the gap size between the tiles so that the gap size of the tiles is uniform.
Reusable, convenient and environmentally friendly.)

(Handle)



(Size)

- 1.5 mm
- 2.0 mm
- 2.5 mm
- 3.0 mm
- 4.0 mm
- 5.0 mm




(Tile positioning cross)

(Size)

(Adjust the gap size between the tiles so that the gap between the tiles is the same and uniform. This design, that can be recycled, but also played a horizontal role.)

(Level)

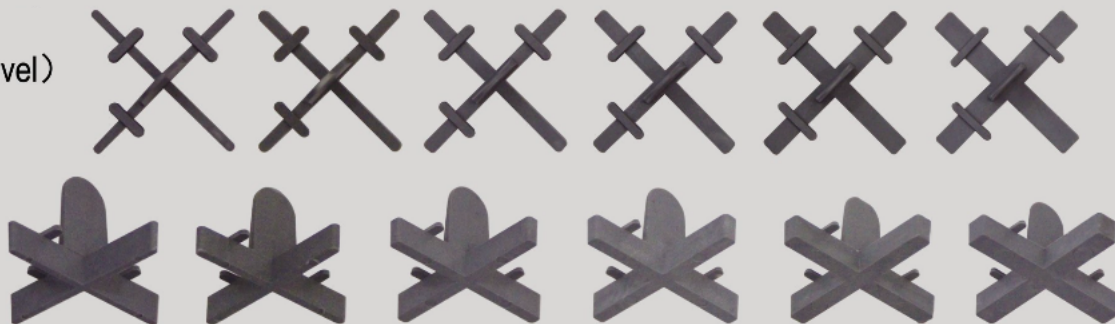

1.5 mm
2.0 mm
2.5 mm
3.0 mm
4.0 mm
5.0 mm

